



VideoWall22 FW update procedure


1. Connection the USB cable to Micro USB port from product front side

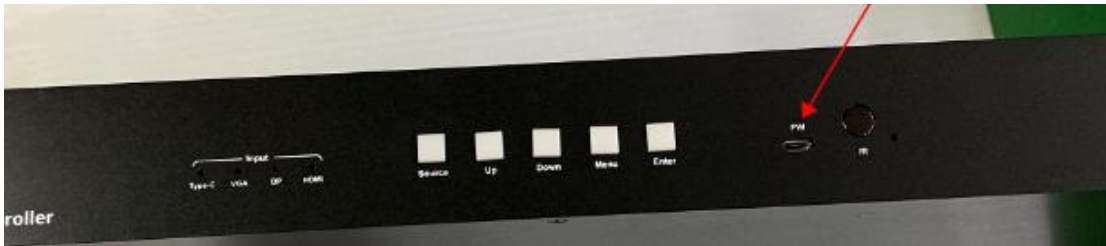

2. Double click the “CH341SER.EXE” to install the driver

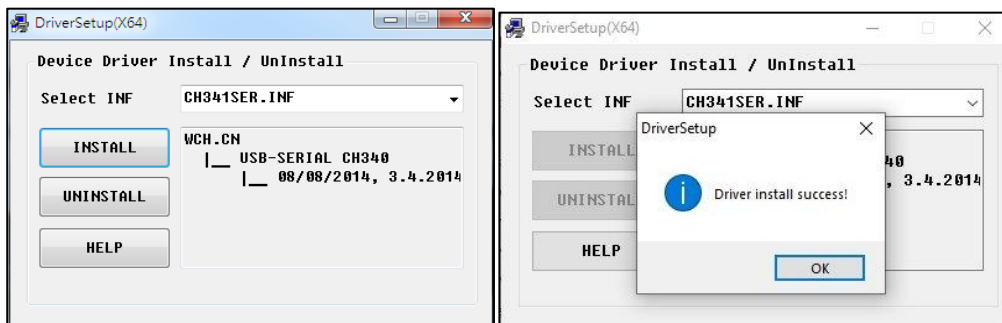


3. Check the “USB-SERIAL CH340” device has been listed under device management

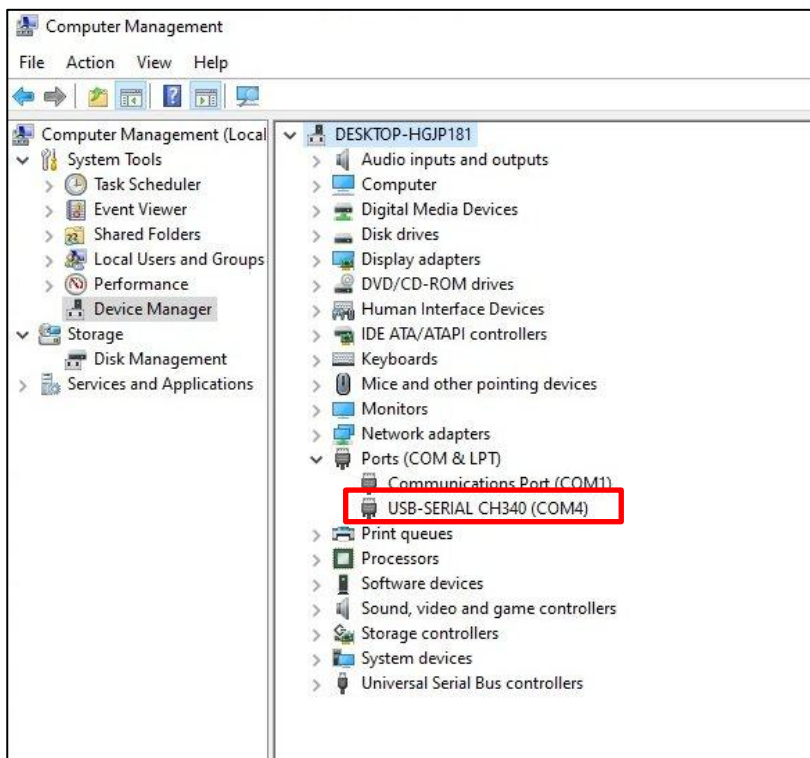


4. MCU update


- Double click **UART_ISP_V1.6**.
- Click the drop-down and select the com port of “**USB-SERIAL CH340**”

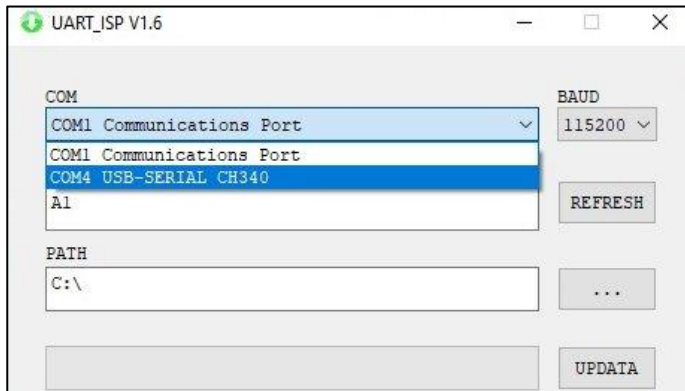

- Click select the FW file of **videowall22_stm32f103rc_v0.0.18_al_598cfcc6.bin** to the PATH location

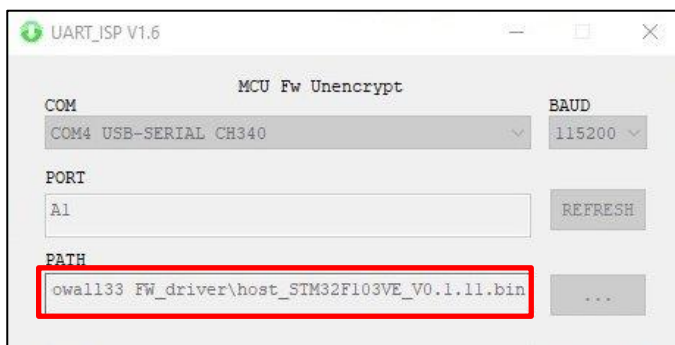

- Click **UPDATE** to proceed with the update.

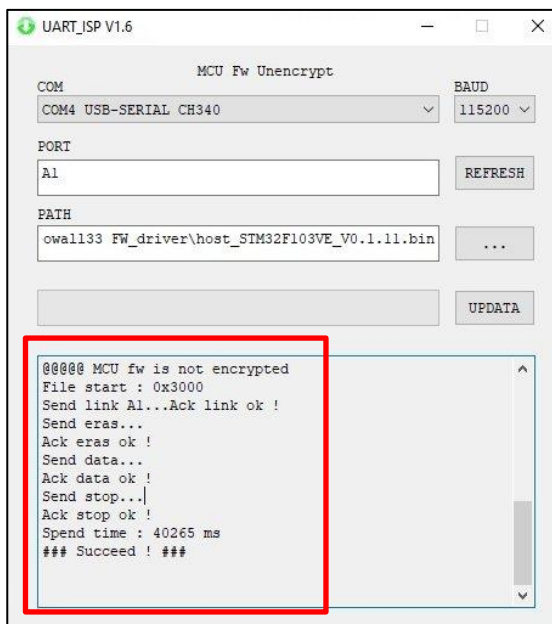

- After the firmware is updated successfully,
- **Noted:** If during the update process, the green bar keeps turning, please turn OFF the device switch and then turn ON the switch again then can continue to update the FW