



PRO-FiberExt

4K HDR over fiber extender with USB

User's Guide













Congratulations for owning a gofanco product. Our products aim to meet all your connectivity needs wherever you go.

Have fun with our products!

Please read this manual carefully before first use.

If you need more information about our products, please visit www.gofanco.com.

For technical support, please email us at support@gofanco.com.

For drivers/manuals download, please go to http://www.gofanco.com/download.

PRO-FiberExt



Table of Contents

1.	Safety and Notice
2.	Introduction 4
3.	Features
4.	Package Contents
5.	Specification
6.	Connection Diagram. 6
7.	Panel Description
8.	Dip Switch Setting
9.	Installation
10.	Notice
11.	Warranty

1. Safety and Notice

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

The **PRO-FiberExt 4K HDR over fiber extender with USB** has been tested for conformance to safety regulations and requirements, and has been certified for international use. However, like all electronic equipments, the PRO-FiberExt should be used with care. Please read and follow the safety instructions to protect yourself from possible injury and to minimize the risk of damage to the unit.

- Follow all instructions and warnings marked on this unit.
- Do not attempt to service this unit yourself, except where explained in this manual.
- Provide proper ventilation and air circulation and do not use near water.
- Keep objects that might damage the device and assure that the placement of this unit is on a stable surface.
- Use only the power adapter and power cords and connection cables designed for this unit.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.



2. Introduction

The PRO-FiberExt 4K HDR over fiber extender with USB boosts up your video/audio transmission distance up to 10km(6.25miles) over single mode fiber optic cables in Ultra-HD4K2K@60 format. Users can readily extend Ultra-HD sources from DVD players, Blu-ray Disc player, PS3, PC, and any other HDMI sources broadcasting to distant display monitors including HDMI or DVI enabled TV sets or LCD PC monitors. Besides PRO-FiberExt is HDCP compliant, and supports IR& RS-232 pass-through path and keyboard/mouse USB signal transmission.

3. Features

- Supports4K2K@60 4:4:4 8bits
- SupportsHDR*, which is 4K2K@60 4:2:0 10bits**
- Supports HDCP2.2
- Extend HDMI signals up to 10km (6.25miles) over single mode fiber optic cables
- · Uncompressed video and audio for no quality loss
- Supports Keyboard & mouse signal transmission
- Supports full frequency IR signal from 20KHz to 60KHz
- Bi-directional IR path-through
- Link LED indicator light
- · Wall mounting housing design for easy and robust installation
 - * HDR = High Dynamic Range.
 - ** The video bandwidth of 4K2K@60 4:2:0 10bits (HDR) is 384 MHz, and the 4K2K@60 4:4:4 8bits is 594MHz.

The RS-232, IR and USB function cannot be used at the same time.

4. Package Contents

- 1x PRO-FiberExt [TX & RX]
- 1x IR blaster
- 1x IR receiver
- 2x DC 12V
- 2x Single Mode Module [optional]
- 1x User Manual




5. Specifications

Item		Description		
Technical		PRO-FiberExt[Tx]	PRO-FiberExt[Rx]	
Role of usage		Transmitter [TX]	Receiver [RX]	
HDMI complian	ce	HDMI 2.0a		
HDCP complian	ce	HDCP 2.2		
Video bandwid	th	Single-link 600MHz [18Gbps]		
Video support		HDR 4K2K@60 (4:2:0 10bits) / 4K2K@60 (4:4:4 8bits)		
HDMI over fiber	r	Yes		
Audio support		Surround sound [up to 7.1ch] or stereo audio		
Equalization		Auto		
Input TMDS sign	nal	1.2 Volts [peak-to-peak]		
Input DDC signal		5 Volts [peak-to-peak, TTL]		
ESD protection		Human body model — ±15kV [air-gap discharge] & ±8kV [contact discharge]		
PCB stack-up		6-layer board [impedance control — differential 100Ω; single 50Ω]		
IR pass-thru		Bi-directional		
RS-232 support		Yes		
Input		1x HDMI, 1x 3.5mm	1x fiber, 1x 3.5mm	
Output		1x fiber, 1x 3.5mm	1x HDMI, 1x 3.5mm	
In / Out		1x RS-232, 1x USB	1x RS-232, 2xUSB	
HDMI source control		Controllable via IR pass-through from RX to TX with IR extenders		
HDMI connector		Type A [19-pin female]		
USB connector		Туре А		
Rotary control switch		Yes		
3.5mm connector		IR receiver / IR blaster	IR receiver / IR blaster	
Mechanical				
Housing		Metal enclosure		
Dimensions	Model	125x112.2x28mm[4.9" x4.4" x1.1"]	125x112.2x28mm[4.9" x4.4" x1.1"]	
	Package	371 x 170 x 77mm[1'5" x 6.7" x 3"]		
[L x D x H]	Carton	410 x 368 x 393mm[1'3" x 1'4" x 1'5"]		
Woight	Model	463g [16.3 oz]	455g [16 oz]	
Weight	Package	1730g[3.8 lbs]	
Fixedness		Wall-mounting case with screws		
Power supply		12V2A		
Power consumption		Max 10W		
Operation temperature		0~40°C [32~104°F]		
Storage temperature		-20~60°C [-4~140°F]		
Relative humidity		20~90% RH [no condensation]		



6. Connection Diagram

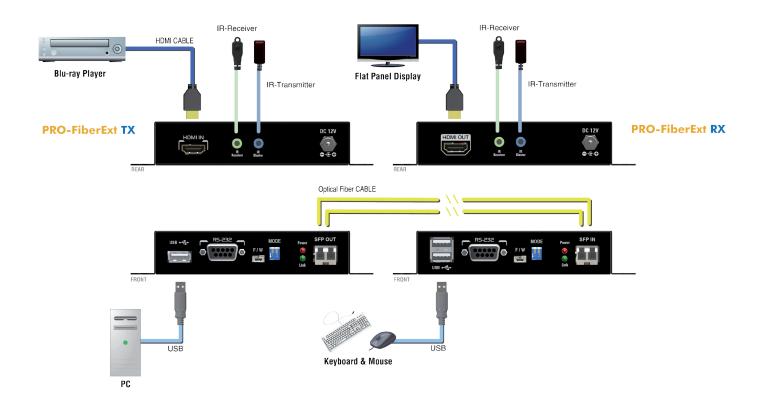




7. Panel Description

Transmitting unit ► PRO-FiberExt-TX

Front Panel

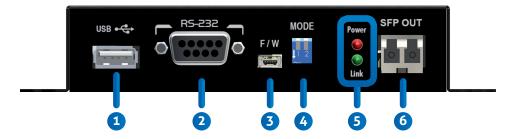

- 1. USB [Host]: Connect to a USB port from the computer for keyboard & mouse control
- 2. RS-232: Connect to serial port device with a DSUB-9 male-male or male-female cable here
- 3. Mini USB: F/W update
- 4. Dip Switch

[Pin 1]: F/W update mode OFF $[\uparrow]$ – Normal; ON $[\downarrow]$ – FW update


[Pin 2]: Reserved

5. LED indicator

[Red]: Power LED indicator [Green]: Link LED indicator

6. SFP OUT: Plug in single mode fiber optic cables that needs to be linked to the receiving unit PRO-FiberExt-RX

Rear Panel

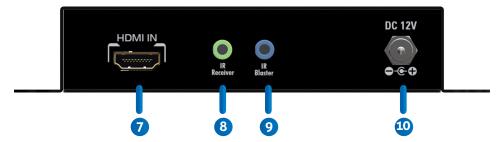


- 7. HDMI IN: Connect to a HDMI source with a HDMI male-male cable
- 8. IR Receiver: Infrared 3.5mm socket for plugging in the extension cable of IR receiver
- 9. IR Blaster: Infrared 3.5mm socket for plugging in the extension cable of IR blaster
- 10. +12V DC: Connect to a 12V power supply unit



Receiving unit ► PRO-FiberExt-RX

Front Panel

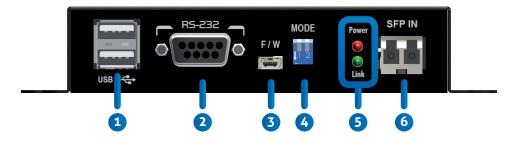

- 1. USB [Host]: Connect to the USB keyboard & mouse
- 2. RS-232: Connect to serial port device with a DSUB-9 male-male or male-female cable here
- 3. Mini USB: F/W update
- 4. Dip Switch


[Pin 1]: F/W update mode OFF $[\uparrow]$ – Normal; ON $[\downarrow]$ – FW update

[Pin 2]: Reserved

5. LED indicator

[Red]: Power LED indicator [Green]: Link LED indicator

Rear Panel

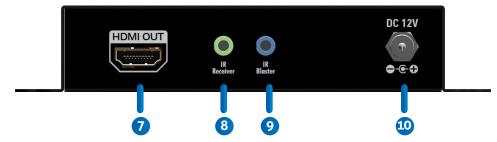

- **6. SFP IN :** Plug in single mode fiber optic cables that needs to be linked to the transmitting unit PRO-FiberExt-
- 7. HDMI OUT: Connect to a HDMI display with a HDMI male-male cable
- 8. IR Receiver: Infrared 3.5mm socket for plugging in the extension cable of IR receiver
- 9. IR Blaster: Infrared 3.5mm socket for plugging in the extension cable of IR blaster
- 10. +12V DC: Connect to a 12V power supply unit



8. IR Pass-Through

IR Extenders









IR Sockets

IR BLASTER:

plug in the IR blaster to emit all IR command signals received from the IR receiver from the other end to control the devices corresponding to the IR signals.

IR RECEIVER:

plug in the IR receiver to receive all IR command signals from the IR remote controls of the corresponding devices.




CAUTION

Incorrect placement of IR Blaster and Receiver may result in the failure of the IR extenders. Please check carefully before plugging in the IR extender to the respective IR sockets. Warranty will not cover the damage.

Definition of IR Earphone Jack



IR Blaster




IR Receiver



You can buy any IR extension cables in the market that are compatible to the definition of the IR sockets for the matrix if necessary for replacement use. However, IR cables longer than 2m (6-ft) may not work.



9. Notice

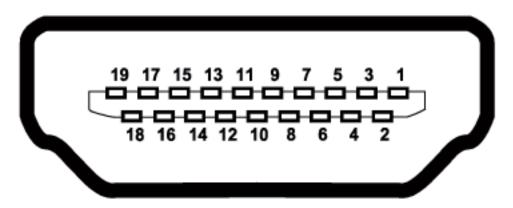

Type A (Receptacle) HDMI

Pin 1	TMDS Data2+	Pin 11	TMDS Clock Shield
Pin 2	TMDS Data2 Shield	Pin 12	TMDS Clock-
Pin 3	TMDS Data2-	Pin 13	NC
Pin 4	TMDS Data1+	Pin 14	Reserved (N.C. on device)
Pin 5	TMDS Data1 Shield	Pin 15	SCL
Pin 6	TMDS Data1-	Pin 16	SDA
Pin 7	TMDS Data0+	Pin 17	DDC/CEC Ground
Pin 8	TMDS Data0 Shield	Pin 18	+5V Power
Pin 9	TMDS Data0–	Pin 19	Hot Plug Detect
Pin 10	TMDS Clock+		



11. Limited Warranty

The SELLER warrants the **PRO-FiberExt 4K HDR over fiber extender with USB** free from defects in the material and workmanship for 1 year from the date of purchase from the SELLER or an authorized dealer. Should this product fail to be in good working order within 1 year warranty period, The SELLER, at its option, repair or replace the unit, provided that the unit has not been subjected to accident, disaster, abuse or any unauthorized modifications including static discharge and power surge. This warranty is offered by the SELLER for its BUYER with direct transaction only. This warranty is void if the warranty seal on the metal housing is broken.

Unit that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for 90 days from the day of reshipment to the BUYER. If the unit is delivered by mail, customers agree to insure the unit or assume the risk of loss or damage in transit. Under no circumstances will a unit be accepted without a return authorization number.

The warranty is in lieu of all other warranties expressed or implied, including without limitations, any other implied warranty or fitness or merchantability for any particular purpose, all of which are expressly disclaimed.

Proof of sale may be required in order to claim warranty. Customers outside Taiwan are responsible for shipping charges to and from the SELLER. Cables and power adapters are limited to a 30 day warranty and must be free from any markings, scratches, and neatly coiled.

The content of this manual has been carefully checked and is believed to be accurate. However, The SELLER assumes no responsibility for any inaccuracies that may be contained in this manual. The SELLER will NOT be liable for direct, incidental, special, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. Also, the technical information contained herein regarding the PRO-FiberExt features and specifications is subject to change without further notice.

Disclaimer

The product name and brand name may be registered trademarks of related manufacturers. TM and ® may be omitted on the user's guide. The pictures on the user's guide are just for reference, and there may be some slight differences with the actual products.

We reserve the rights to make changes without prior notice to a product or system described herein to improve reliability, function, or design.

